

Omni-joint®

Mounting Instructions

for

Double Junction Door

GRANI



T-9575



T-131675



C-131650-2F





INSERT C-131650-2F
INTO THE DOOR JAMB







**INSERT T-9575
AND SCREW**



**INSERT
C-131650-2F
INTO THE
DOOR BATTEN**

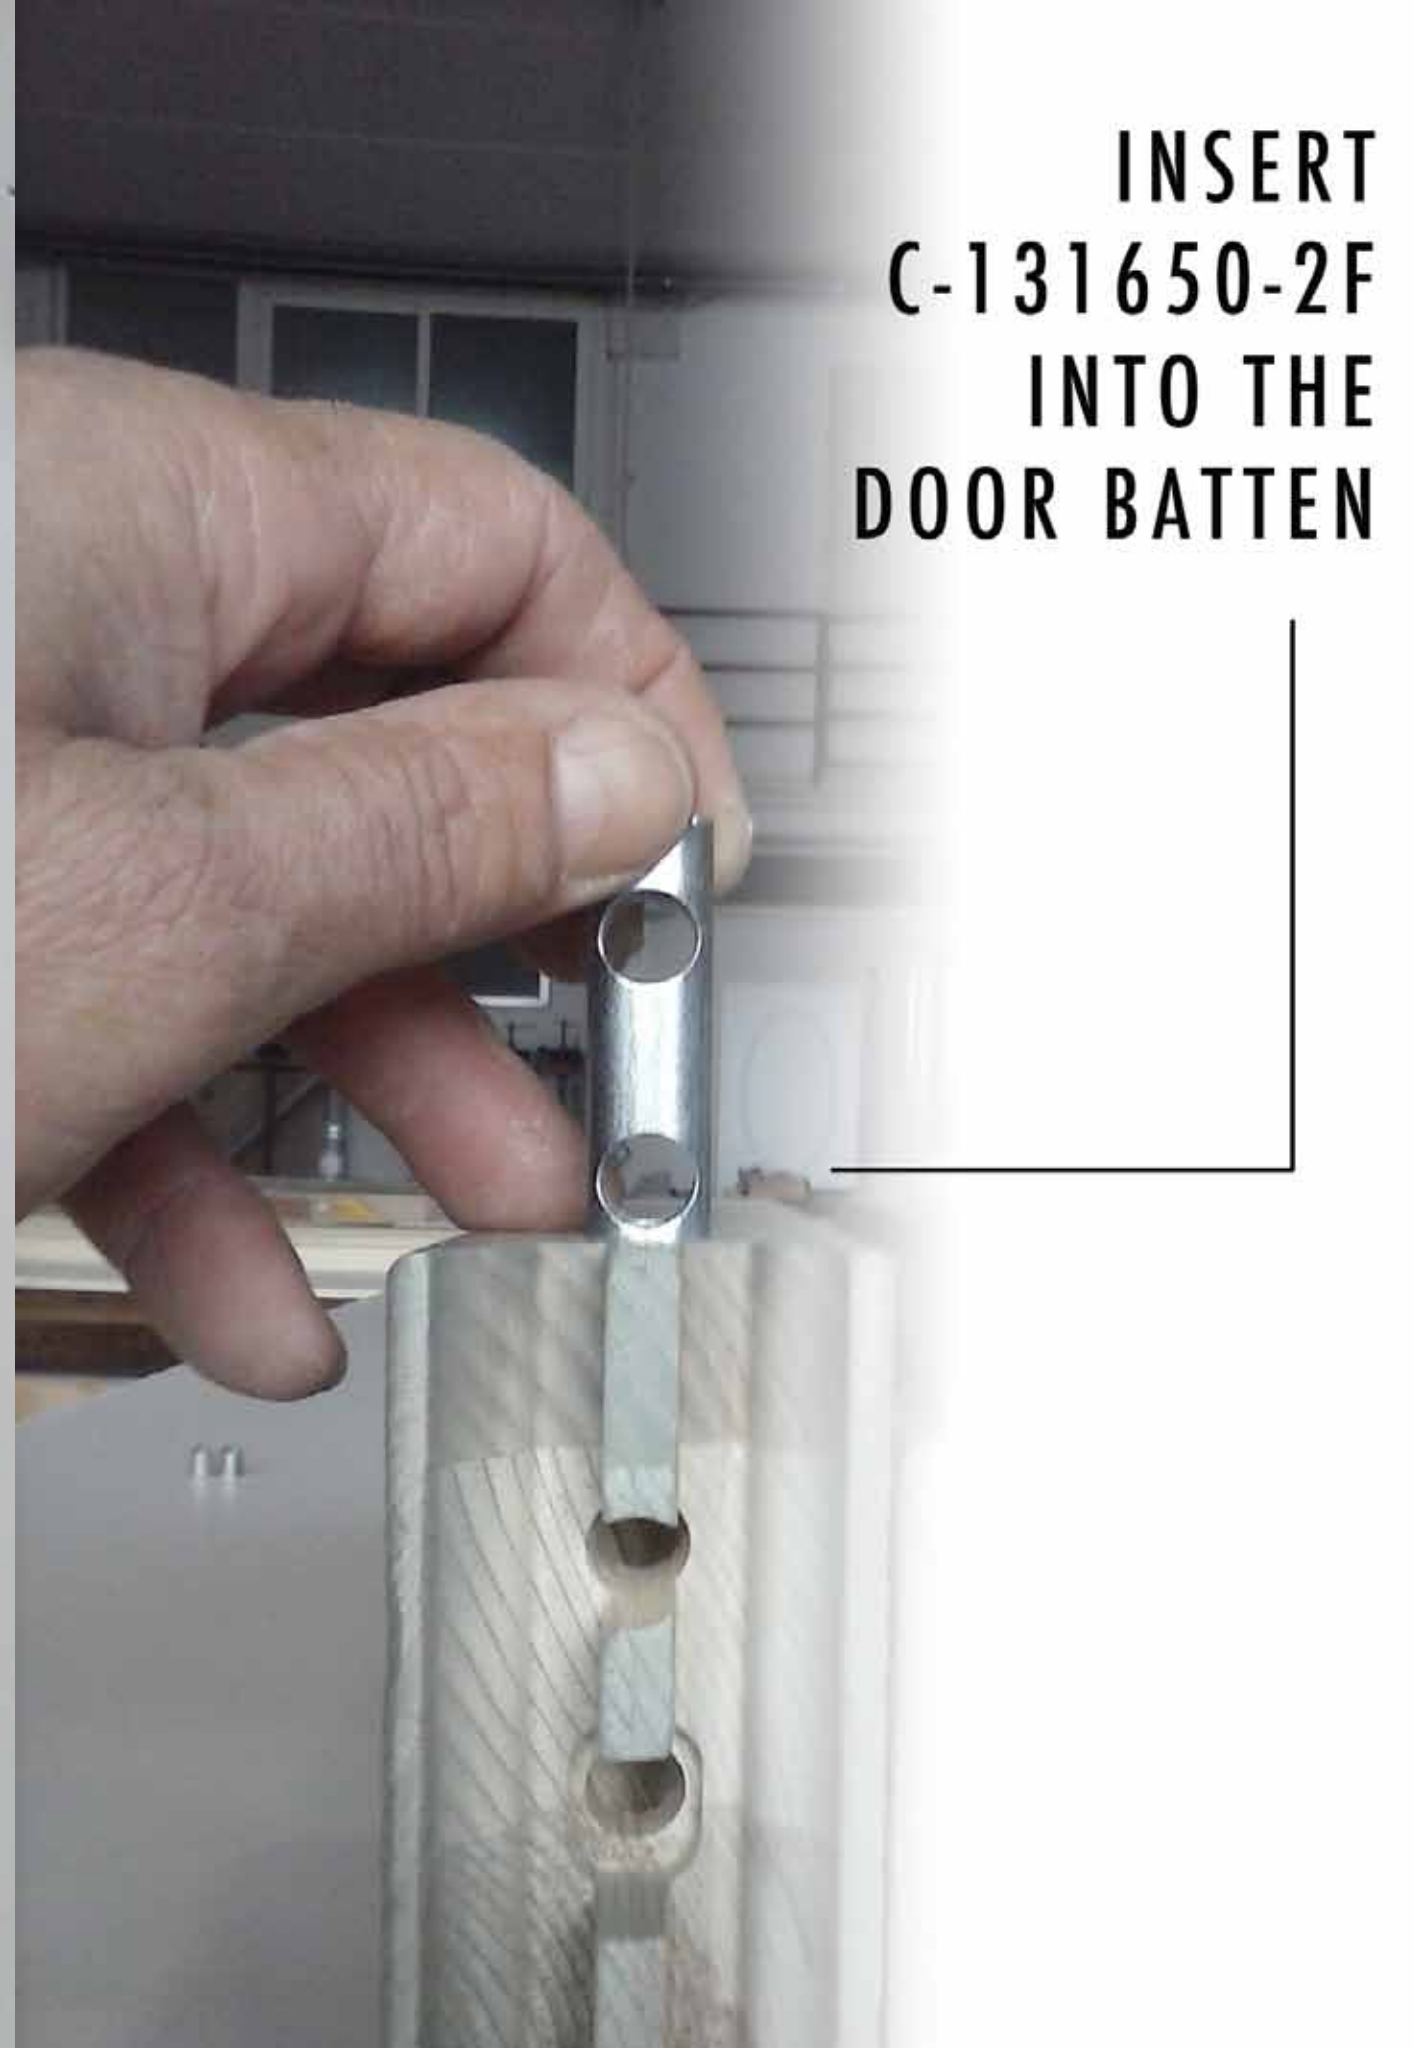

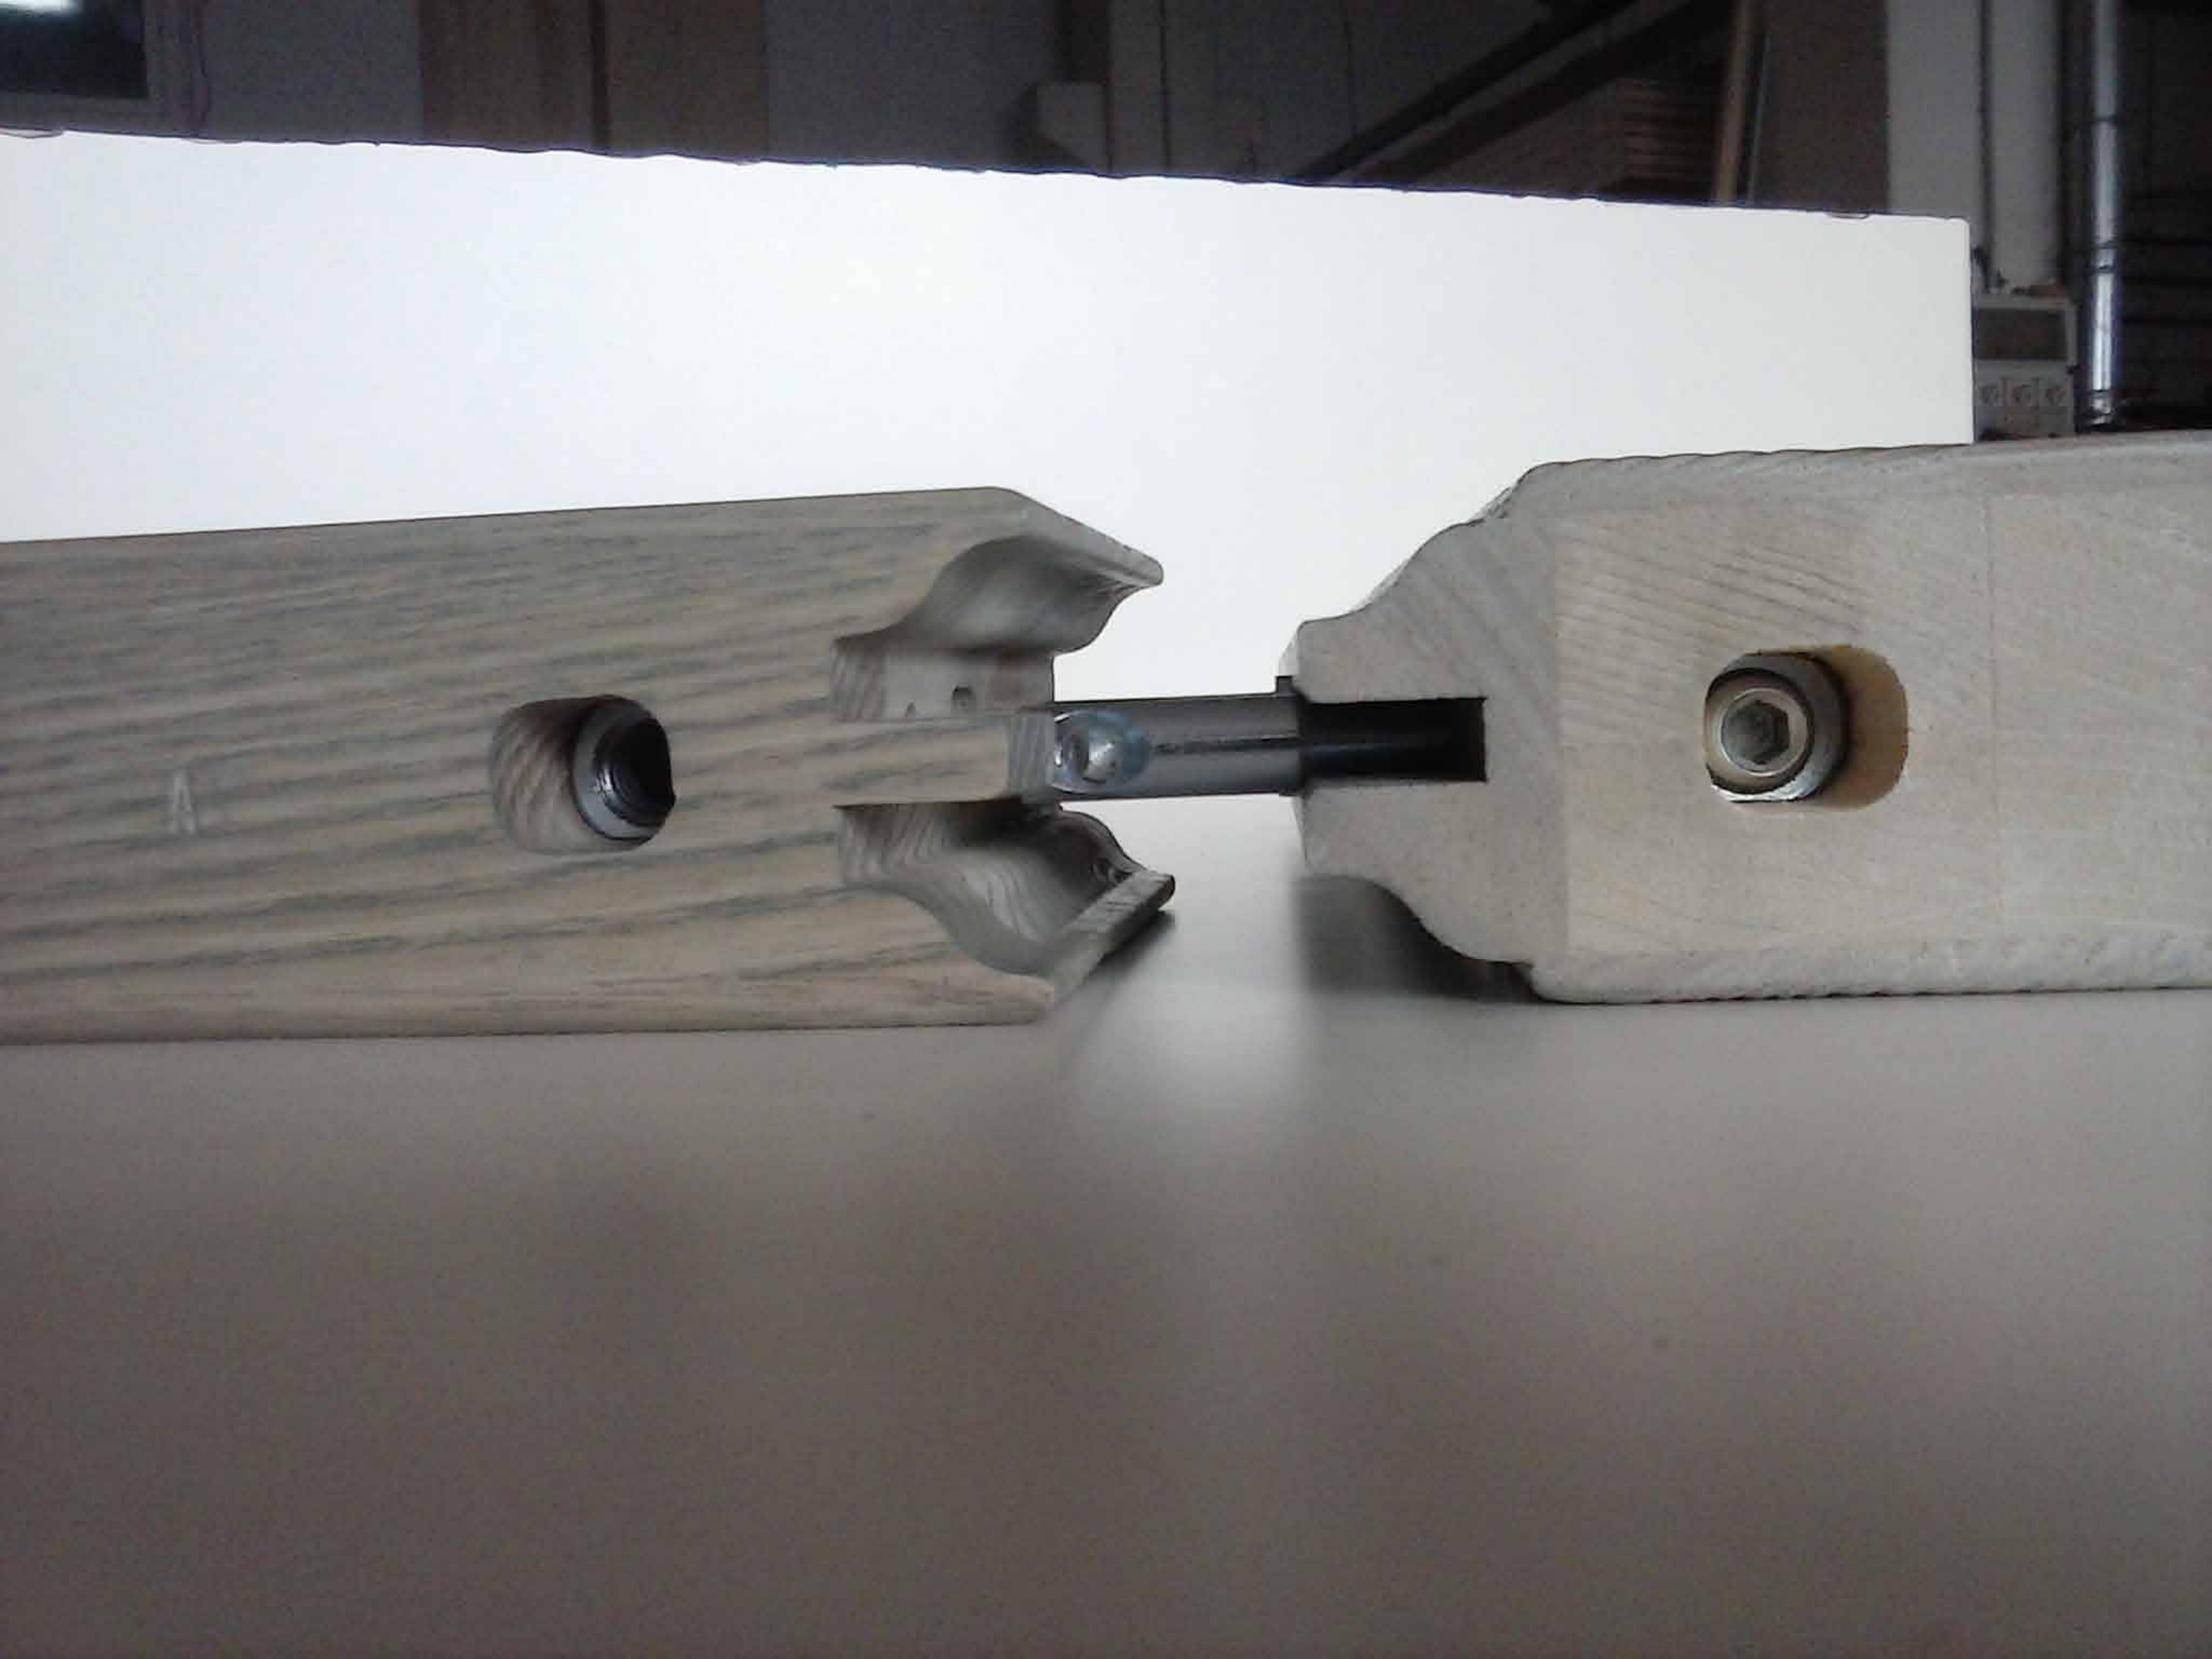



SLACKEN RIGHT GRUB SCREW—
MOVE LEFT THE T-9575
(TO ALLOW KEY'S PASSAGE)
—SCREW THE INTERNAL GRUB SCREW (GRANO)





